

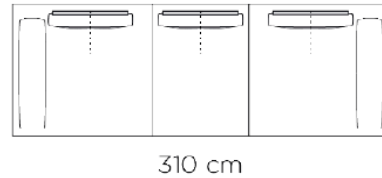
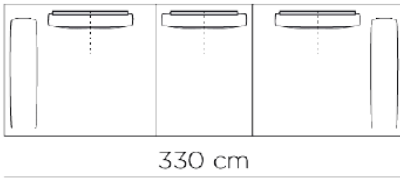
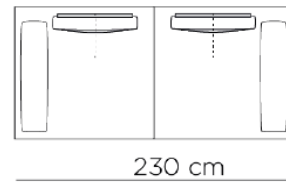


DIVANI

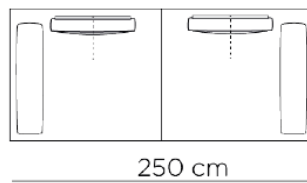

VOLD330

VOLD310




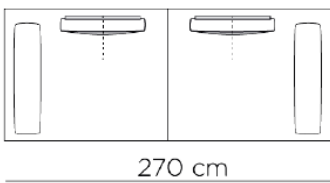


VOLD270

VOLD250

VOLD230

LATERALI

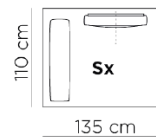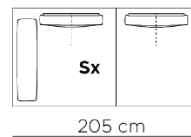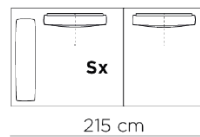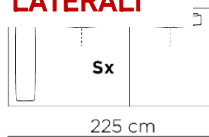

VOLL225

VOLL215


VOLL205

VOLL135

VOLL125

VOLL115

CENTRALI

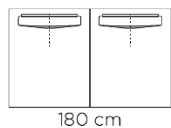

VOLC180






VOLC90

VOLR200

VOLR170

ANGOLI

POUFF

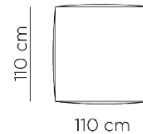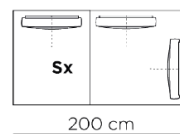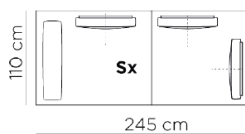




VOLA245

VOLA200

VOLA110

VOLP110

CUSCINI

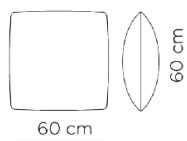

POR74F

RUL90

CUS60S

CUSPOR84